


Digital Instructions

- Time 1+2
- Alarm 1+2
- Chronograph
- Countdown Timer
- Auto EL

RESET

If the time display is interrupted, we suggest resetting the watch. To reset all functions, press and hold all four buttons at the same time. It will default to 12:00 AM, January 1, 2000.

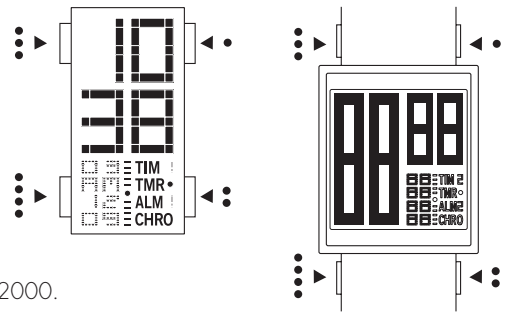

TIME

Normal Time Mode:

- "⌚" will take you to the next mode. Each mode will flash twice on screen to indicate which mode you are in (when the Chime function is activated, you will also hear a beep).
- "☀" will activate the backlight on the display. Pressing and holding the "☀" button until two short beeps sound, will turn on/off the auto EL feature. This will activate the backlight any time that a button is pressed.
- "⌚" will change the displayed time from Time 1 to Time 2. This will be indicated by the TIM 1 or TIM2. Press and release to view the alternate time. Press and hold for 2 seconds to change to the alternate time.
- "•" will turn the chime on/off. When on, this will allow you to hear a beep when any buttons are pressed, and at every hour. This will be indicated by the dot in the center of the display.

Setting Time and Date:

1. Press and hold the "⌚" button until you hear a beep sound twice, and the hour digits start to flash.
2. "•" will allow you to adjust the flashing digits.
3. "⌚" will advance to the next adjustable element (in this case the minutes).
4. Repeat steps 2 and 3 to reset the seconds to "00," 12/24 hr, year (2000-2049), month, and date (day will be automatically calculated).
5. "⌚" will exit set mode.

CHRONOGRAPH

1. "•" will start/stop the 100th/sec. chronograph timer. The "O" will flash in any mode other than the Chronograph mode, to let you know the chronograph timer is running.
2. "⌚" will reset the chronograph when it is stopped. "•" will split the chronograph timer when it is running. The "CHRO" will flash when in split mode. The split time will only be displayed for 5 seconds. After that, the timer will return to the running chronograph mode.
* When the chronograph has counted to 1 hour, it will beep for 2 seconds (if the chime is on) and the chronograph display will change to hour, minutes, seconds, instead of the minutes, seconds, 100th/sec.

COUNTDOWN TIMER

Timer Set Mode:

1. Press and hold "⌚" until the minutes start to flash.
2. "•" will allow you to adjust the minutes.
3. "⌚" will advance to the seconds.
4. "•" will adjust the seconds.
5. "⌚" will exit the set mode.
* The minimum value for the countdown timer is 03 seconds. The maximum is 59 minutes, 59 seconds (default setting is 00 minutes, and 00 seconds).

Timer Mode:

1. "•" will start/stop the countdown timer. The "•" will flash in any mode other than Timer mode, to let you know the countdown timer is running.
2. "⌚" will restore the previously set time on the countdown timer, when it is not running.
* When the timer counts down to zero, it will beep three times, and the "•" will flash for three seconds.

ALARM

1. Press and hold "⌚" until you hear a beep sound twice and the hour digits start to flash.
2. "•" will allow you to adjust the flashing digits.
3. "⌚" will advance to the next adjustable element.
4. "⌚" will exit set mode.
5. "•" will turn the alarm on/off.

Note: While there are two separate alarms (1 & 2), Alarm 1 is only for Time 1, and Alarm 2 is only for Time 2. When you change Time 1 to Time 2, in Time mode, Alarm 1 will also change to Alarm 2 in Alarm mode. Alarm 1 will only sound when in Time 1, and Alarm 2 will only sound when in Time 2. The on/off function for each of these alarms (1 & 2) is independent and needs to be activated individually.

(=) Bar icons will appear in center of display when alarm is on.